

Wiring the RC210 to the Kenwood TKR 720/820

RC210 Port Connector

TKR Accessory Connector

Pin 3

Pin 8

Pin 4

Pin 5

Pin 5

Pin 10

Pin 6

Pin 11

Pin 7

Pin 13

Pin 8

Pin 6

Pin 9 not connected

Remove deemphasis jumper from the RC210 Port to which the repeater is connected.
COS Polarity jumper in controller should be between Pins 2 & 3 (Active Low)